tapflo

AIR OPERATED DIAPHRAGM PUMPS

2022 |



....

Contents

1	About Tapflo	3 0	Aseptic series	29
lapla	Tapflo Diaphragm pumps	4 50	General	29
	Working principle	4	Typical applications	29
	Fast facts	4	Features & Benefits	29
	Features & Benefits	4	Performance curves	30
	How to install Tapflo pumps	5	Dimensions	30
	Key components of the Tapflo pump	6	Technical data	30
	Applications	8		
		20	Intelligent pumps - TC series	31
1	PE & PTFE series	10-	General	31
G 183	General	10	Features & Benefits	31
34.5	Typical applications	10		
	The ingenious Tapflo design	11	Filter press pumps - TF series	32
	Special versions	12	General	32
	Performance curves	14	Features & Benefits	32
	Dimensions	15	The installation	32
	Technical data	16	Technical data	32
	Pump code	16	Decides access Theories	22
	r amp code	MA	Powder pumps - TP series General	33
77	Metal series	17	Features & Benefits	33
800	General	17	Working principle	33
EJ.		17	Technical data	33
	Typical applications The ingenious Tapfle design	18	recrimentation	30
	The ingenious Tapflo design	19	Pharmaceutical pumps - TU series	34
	Special versions		General	34
	Performance curves	21	Features & Benefits	34
	Capacity changes	21		-
	Dimensions	22	Active pulsation dampeners	35
	Technical data	23	General	35
	Pump code	23	Working principle	35
475	9.00		Options & accessories	35
- 2	Sanitary series	24	Dimensions	36
	General	24	Dampener code	36
365	Typical applications	24	āk	
	The sanitary design	25	Systems & accessories	37
	Special versions	26	Guardian systems	37
	Performance curves	27	Control systems	38
	Capacity changes	27	Mobile solutions	38
	Dimensions	28	Filter regulator & needle valve kit	39
	Technical data	28	Pneumixer	39
	Pump code	28	Contact	40



All about your flow

We began our journey in 1980 in Kungälv, a small town on the Swedish west coast, as a family company with an ambition to one day become a global player on the pump market.

Since the foundation, we have taken pride in delivering a wealth of knowledge and passion for pumps to the industry, whilst supplying a wide range of premium products for various industrial applications.

Over the years, the company has developed into a global Tapflo Group with branches and distributors present in nearly every region of the world.

One thing did not change - we are still a family company.

Our solutions are designed and manufactured in Europe and distributed globally to offer the best service and flow solutions to our customers for a variety of applications.

Our values, Commitment, Quality and Simplicity are reflected both in our product and business approach.



For fast and flexible service and high-quality products readily available worldwide, choose Tapflo.

Quality commitment

At Tapflo we are simply committed to quality. As a result, our production standards, as well as products quality, comply with various globally recognised certification and quality control standards. The Tapflo manufacturing process is certified according to ISO 9001:2015, confirming that our processes are appropriate, effective, customer-focused and continuously improved.

















Tapflo values

Our culture is concluded in Our values

Commitment

We are different from our competitors because of our willingness to exceed the customers' expectations, move fast and be flexible. Our culture is based on the spirit of togetherness, enthusiasm and integrity. We come from all over the world but we share the same values and we respect each other. We are committed.

Quality

We understand that the quality in our work is never better than the weakest link, that's why we focus on every small detail. We share a common passion for continuously finding more efficient and effective ways to provide value to our customers. As a manufacturer we have control of the complete process both in terms of our products and the way we operate internally. That is why we manufacture the highest quality pumps in our segment.

Simplicity

We have a saying, "Simple is art" which means we try to find smooth and uncomplicated solutions in everything. By keeping it simple we can focus on the essential, like designing uncomplicated pumps with few components. For us it is a key to success; strive to simplify what is complex.

Diaphragm pumps

most versatile pumps on the market


Working principle

Tapflo diaphragm pump is driven by compressed air. Two diaphragms are working simultaneously to prime and push the liquid through the pump system. Valve balls work as check valves to let the liquid through in the right direction.

During each cycle the air pressure on the back of the discharging diaphragm is equal to the head pressure on the liquid side. Tapflo diaphragm pumps can therefore be operated against a closed discharge valve with no adverse effect to the life of the diaphragms.

Suction

One diaphragm creates a suction action when being pulled back from the housing.

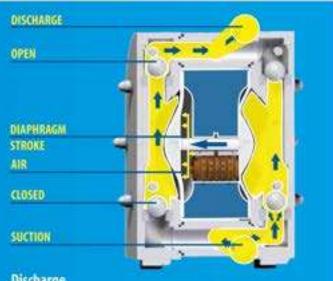

Discharge

The other diaphragm simultaneously transmits the air pressure to the liquid in the housing, pushing it towards the discharge port.

Fast facts

Capacity 0-820 l/min **Pump materials**

> 0 - 216 US gal/min PE, PTFE, aluminium, cast iron, stainless steel AISI 316L.

0 - 8 bar (max 16 bar for TF series) and PTFE coated aluminium Pressure

0 - 116 PSI (max 232 PSI for TF series)

Connection sizes 1/4" up to 4" (DN8 - DN100)

Features & Benefits

Run dry without damage Easy to use, no need of guarding device

Thorough flow control Flexible and easy to adjust

Self-priming up to 5 m from dry suction pipe More options of installation

No electricity needed Explosion proof versions Ex-zone 1 available (ATEX group II, cat 2) Zone 0 also available (ATEX group II, cat 1) Solid, strong construction Wide range of working pressures 0-16 bar (depending on pump series)

Few components & long life design Low downtime and maintenance cost

Lubrication free air distribution system Saves the environment from pollution

Air operated Can operate against closed valve. Easy to install without special training (no electricity)

How to install Tapflo pumps

Tapflo Pumps are flexible and easy to install. The in- and outlet ports can rotate 180° to fit your piping system (PE & PTFE and metal series pumps).

Flooded

The piping system is designed with a positive suction head.

This is the best way of installation where it is necessary to completely evacuate all liquid from the container, or where viscous (thick) products are transferred.



Self-priming

The Tapflo pump is designed to pull a high vacuum. It is able to evacuate an empty suction pipe without any damage to the pump. The suction lift is up to 5 meters (16.4') from an empty suction pipe and up to 8 meters (26.2') from a wetted pipe. The suction capability depends on the pump size (see pages 16, 23, 28).




Submerged

All Tapflo pumps may be submerged into the liquid.

It is important to make sure that all components which are in contact with the liquid are chemically compatible.

The air exhaust must be led to the atmosphere by means of a hose.

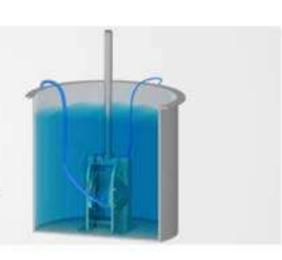

Key components of the Tapflo pump

Long life diaphragms

Tapflo diaphragms are of composite construction, superior for continuous heavy duty service, with a completely smooth surface in contact with the liquid. This results in no leak through and a diaphragm which is easy to keep clean.


The diaphragms are available in various materials and colours to suit any requirements, they are made from EPDM, NBR, FKM, PTFE, PTFE TFM 1705b, EPDM white, PTFE with white EPDM back, NBR white.



Multilayer Design

An advanced process of preforming, curing, trimming and finishing results in a long life composite diaphragm that will last for many millions of cycles. All compounds are specially developed and optimized for composite diaphragm technology and compression molding production. Components are chemically bonded by bonding agents and adhesives

(1) PTFE TFM layer | (2) Front layer | (3) Core (metal) (4) Fabric | (5) Back layer

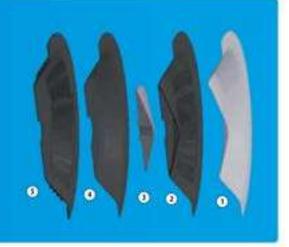


Energy saving drive

The air valve is the driving heart of the pump, redirecting the compressed air to the chambers behind the diaphragms. The air valve is placed in the centre of the pump between the diaphragms, to minimize air ways and dead volumes. This all together is the key to a reliable and energy saving drive.

It is made for maintenance free duty with no lube air, thanks to the ingenious sealing system. It will not only save your money for lubrication, it will also protect environment from pollution.

The valve body is made from brass or optional PET or stainless steel AISI 316L.

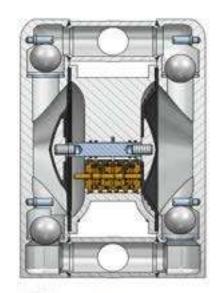



Ball check valves

The Tapflo pump is fitted with four check valves, making sure that the liquid is transferred in the right direction through the pump.

The ball type valve is the most simple and reliable valve design. It has a good sealing capability and is easy to keep clean and to replace if necessary.

The ball valve materials are available in EPDM, NBR, PTFE, PTFE TFM 1635, PE1000, FKM, PU, Ceramic, SiC, AISI 316L to suit any kind of liquid.



Flap valves (Sanitary pumps)

Flap valves are used for pumping liquids containing big solids without damage. Tapflo flap valve pumps are able to pump solids up to 18 mm in T80 and T125, 42 mm in T225 and T425 and 95 mm in T825 pump size. Pumps can reach dry suction lift up to 4,5 meters.

Tapflo Flap Valve design has only two components and are hygienic thus easier to clean.



Magnetic ball lifters (Sanitary & Aseptic pumps)

Possibility to drain the pump is crucial in most hygienic applications. The ball lifting system from Tapflo could not have been easier.

Magnetic ball lifters are implemented in Sanitary and Aseptic series AODD pumps, to enable pump emptying without removing it from the installation when no other draining option is available. Rotating the pump is no longer needed.



Working principle

The valve balls, either made of AISI 420 or PTFE with steel core. are lifted by an influence of magnetic field generated by the ball lifting device. The ball lifting operation is made simply by attaching the magnets to the pumps manifolds.



Applications

Various liquids - Tapflo pumps are compatible with a very wide range of chemicals:

- Corrosive and chemical aggressive
- High and low viscous
- Abrasive
- Solid content
- Shear sensitive
- Flammable











PE & PTFE series pumps

Tapflo pumps made from polyethylene (PE) or polytetrafluoroethylene (PTFE) are suitable for handling almost any kind of liquid whether it is viscous, chemically aggressive or with solids.



Polyethylene pumps

Polyethylene (PE HD) has a superior wear resistance which is 6 - 7 times better than for polypropylene (PP). This fact makes the pump suitable for handling abrasive slurries etc. PE is resistant to most kind of aggressive chemicals such as concentrated acids and alkalis. Maximum liquid temperature is 70°C. Tapflo uses different grades of PE depending on the part. For valve seats and ball stoppers, which are most vulnerable to wear - UHMW PE1000 is used for best mechanical strength and abrasion resistance.

PTFE pumps

PTFE (virgin polytetrafluorethylene) is a thermoplastic polymer with superior chemical resistance. The PTFE pump can handle even the most aggressive acids. Maximum liquid temperature is 110°C.












The PE & PTFE pump range

- >> TR9 11 I/min, 1/4"
- >> TR20 24 I/min, 3/8"
- >> T50 60 l/min, 1/2"
- >> T100 125 I/min, 1"
- >> T200 330 I/min, 1 1/2"
- >> T400 570 I/min, 2"
- >> T800 820 I/min, 3*

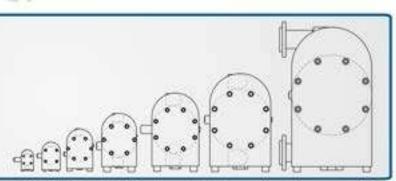

Typical applications

Industry	Example of applications
>> Chemistry	Acids, alkalis, alcohols, solvents, emulsions
>> Food	CIP liquids, flavours, pigments
>> Pulp & Paper	Glue, slurries, adhesives, dispersions, resins, sodium silicate, titanium oxide
>> Surface treatment	Acids, solvents, anodic sludge, varnish, enamels
>> Water treatment	Sludge handling, filter press applications, neutralization and flocculants
>> Electronics	Carrier fluids, ultra-pure liquids, electroplating solutions, mercury, solvents
>> Print & paint	Glue, additives, varnish, ink, paint, latex, acid, resins, pigments

The ingenious Tapflo design

Few components and a simple design are common for all Tapflo pumps. The pumps are compact, easy and quick to maintain, keeping your service costs and process down time to a minimum.

Flexible installations

The connections may be rotated 180". Simply turn the connections to fit your piping system. BSP and NPT threaded connections as standard, AISI 316L optional material or other connection types are available as an option. AISI 316 or other connections types are also available.

Solid and strong

The pump body is machined from solid PE or PTFE. The robust design will stand against mechanical forces as well as aggressive chemicals.



Low air consumption

The air distribution system is designed to ensure the shortest possible airflow path and eliminate dead volumes. This results in high efficiency and low air consumption.

Chemical design

The compound diaphragm has a completely smooth liquid side surface and with no metal in contact with the pumped liquid. Ideal for a safe chemical handling.



PE pumps - suitable for most chemicals and abrasive liquids



PTFE pumps - suitable for the most aggressive chemicals

Special versions



Drum pumps | TD series

Light and mobile solution for emptying drums and containers Tapflo TD pumps are irreplaceable in such applications.

The pumps are fitted with a drum tube in polypropylene (PP) or PTFE and a handle in AISI 316L stainless steel.

The PE & PTFE drum pumps range

- >> TRD20 24 I/min, 1/2" suction, 3/4" discharge
- >> TD50 60 I/min, ¼" suction, ½" discharge
- >> TD100 125 I/min, 1 1/4" suction and 1" discharge

Features & Benefits



Customizable tube length

The drum tube is delivered in any length up to 2 m



Highly mobile and versatile

Pumps can be easy moved between different drums and containers



Handy and convenient

Compact pump equipped with comfortable handle



Integrated heavy duty flanges | 3D/3A

The robust design of integrated flanges proves itself useful when there is a risk of vibration from the installation. The solid manifolds provide better stability and sealing for the pump.

This design is a perfect solution for most demanding applications such as in TF Filter press pumps where pump operates at higher pressures.

- Available for sizes: TR20, T50, T100, T200, T400
- Available materials: PE, PE cond., PTFE, PTFE cond.
- Flange standard 3A = ANSI flanges 3D = DIN flanges

Special versions







Tapfle TX ATEX dassification: 5x8 26 9xh 8C16... 14 Gb Ext 2D Exh BIC 160°C...Tr25°C Dis

Tapfile TZ ATEX classification: Ex II 16 Ex h BC 16... 14 Ga



Pump with built-on dampener | TK series

The built-on dampener is an ideal solution to eliminate pressure variations on the pumps discharge where space in the installation is limited.

Available for sizes: TRK20, TK50, TK100, TK200

Twin pumps | TT series

Tapflo PE & PTFE series pumps may be fitted with double in/outlet to achieve "two pumps in one" for blending, mixing or recirculation of liquids.

The liquid in one pump chamber is separated from the other one.

Examples of applications

- >> Mixing of two liquids with one pump (50/50 ratio) (installation example)
- >> Transfer and return of printing ink from storage to ink tray
- >> Transfer and agitation of liquids with one pump



Explosion proof pumps | TX series

The ATEX directive 2014/34/EU (also known as ATEX 114) is applicable on products used in explosion hazardous zones.

Tapflo pumps made from conductive (carbon filled) plastics PE or PTFE are made for use in explosion hazardous environments. They can be used in Ex-zone 1 and Ex-zone 0. The conductive material ensures that no electrostatic loads will be accumulated in the pump.


The conductive pigment in the material reduces the surface resistance. Transfer of alcohol and solvents are examples of applications for the Tapflo TX and TZ pumps.

Performance curves

The performance curves are based on water at 20°C. Other circumstances might change the performance.


Example see the red line ----

A flow of 6 litre/minute is desired. The discharge head is calculated to 30 mWC. We choose a TR9. It requires an air pressure of 6 bar and will consume approximately 0.10 Nm³/minute.

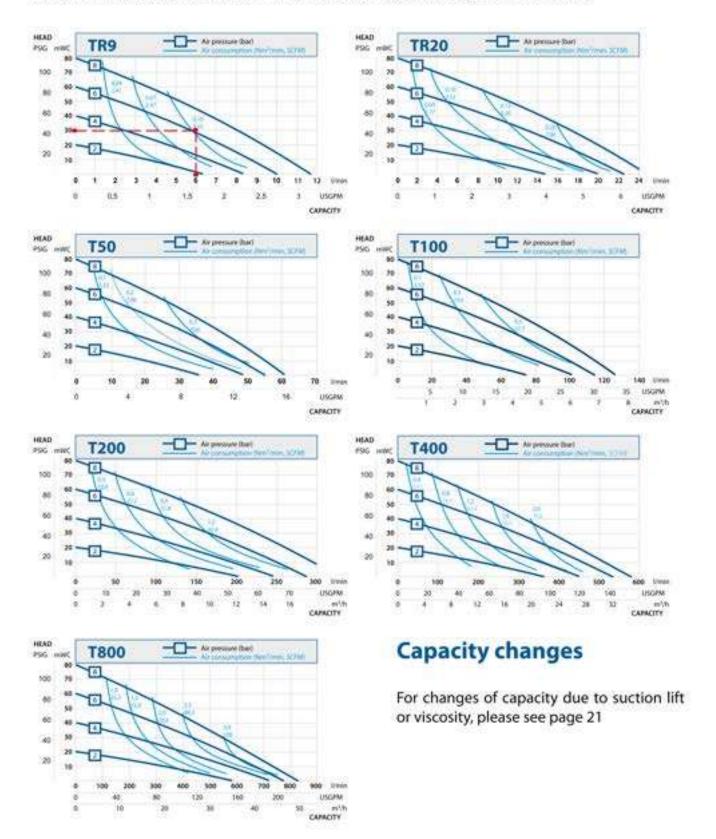


Dimensions

Standard PE pumps

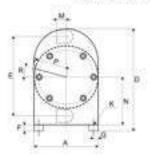





Standard PTFE pumps

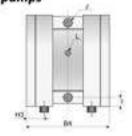



Drum pumps TD

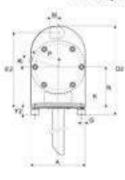

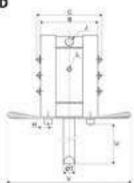



Twin pumps TT

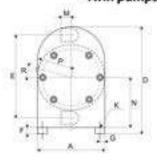



Filter press pumps TF



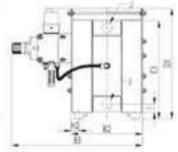

Dimensions for PE & PTFE series

Dimensions in mm (where other is not indicated) Dimensions in inch (where other is not indicated)

n.	Pump size									
Dim	9	20	50	100	200	400	800			
40	70	105	150	200	270	350	460			
A	2.76	4.13	5.95	7.87	10.63	13.76	18,11			
and.		- 4	150	300	300	404	- 10			
A2	4500	1000	5.91	11.81	41.87	15.91				
-	94	113	162	216	313	382	557			
В	3.70	4.45	6.38	8.50	12,32	15.04	21.93			
**	1000		168	224	324	392	200			
82		4	6.61	8.87	12.76	15.43				
2022			262	415	595	670	- 20			
83		-	10.31	16.34	23.43	26.38				
233	134	152	202	256	352	422				
84	5.28	5.98	7.95	10.08	13.80	16.61				
Mar.	116	134	185	252	350	426	601			
C	A.57	5.28	7.28	9.92	13.78	16.77	23.00			
	123	168	243	320	450	963	830			
D.	4.84	6.61	9.57	12.60	17.72	22.17	32.68			
	- HADING	173	249	325	17.72	ec.cr.	110000			
D2	-	6.81	9.80	12,80						
		0.01			501	583	-5			
03	1		13.86	351	19.72					
	1.5	- 2		13.82	500	22.95	-0-			
D4			343	364	1.00	610	-			
	44	122	13.50	14.33	19.69	24,02				
E	92	132	190	252	345	440	650			
	3.62	5.20	7.48	9,92	13.58	17.32	25.59			
E2:		147	210	280	-					
-		5.79	8.77	11,02		- 1	-			
E3		- 5 -	244	319	447	588	-			
			9.61	12.56	17.60	21,92	-			
F	8	8	15	15	30	30	30			
100	0.31	0.31	0.59	0.28	1.58	1,18	1718			
F2		13	20	20	8.1	1.0	-			
100		0.51	0.29	0.70	2.0		- 3.			
	9	15	17	30	30	30	20			
9	0.35	0.59	0.67	1.18	1.18	1.18	0.79			
	10	15	16	30	30	30	30			
н	0.39	0.59	0.63	1.18	1.18	1.18	1.18			
*100	-	40	19	34	35	35	1,170			
H2	0.00	100	11.75	1,34	1.38	1,38				
2000	30	35	36.	50	50	50	-			
H3	1.19	1.36	1.62	1.97	1.97	1.97	- 53			
201	12	15	20	28	38	48	80			
10	0.47	6.59	0.79	1.10	1.50	1.89	3.15			
	1/47	3/8"	1/2"	1"	1 1/2"	2"	3"			
1	1.74	378	1/2	-	11/2	2	25			
	1/4"	3/8"	1/2"	3/4":	1-	11/2"				
12.	1/4	3.0	1/2	3/4	1	1-1/2				
	M4x16	M4x16	M8x25	M8x25	M8x25	M8x25	M8x2			
K.	Mit	M4	MS	Maxica	MS	MII	MS			
	1/8"	1/8"	1/4"	1/4"	1/2"	1/2"	1/2"			
L	100	77.7		1000		1/2				
	1/6	1/8	1/4	1/4	1/2		1/2			
M.	15	17	25	38	54	70	105			
	0.59	0.67	0.98	1.50	2.13	2.76	4.23			
N	58	81	115	154	211	268	411			
	2.28	3.19	4.53	6,06	8.31	10.53	25.38			
P	35	52	80	105	143	183	237			
	1.38	2.05	3.15	4.33	5.63	7.20	9,33			
R	0	0.	15"	15"	0,	0,	0,			
-	0	0,	157	15"	0,	07	4,			
5	13	15	21	27	35	42				
-	0.51	0,59	0.83	1.06	1,38	1.05	- 8			
ØT		20	32	32						
821		0.79	1,26	F.26			-			
44	- 0	1170*	1170*	1170*						
U		46.06*	46,06"	46.06*		-	-			
			20.00	400						
v		286	360	401	+		+			

- * = Any length up to 2000 mm upon request
- * = Any length up to 79" upon request

Technical data

9000 9000	Pump size							
Data	9	400	800					
General characteristics								
*Max capacity (Vmin) / (U5 gpm)	11/29	24/63	60 / 153	125733	330/87	570/150	8207.210	
**Volume per stroke (ml) / (cu ini	15/09	26/15	116.77.1	305 / 18.6	854/521	2326/141.9	524073193	
Max discharge pressure (bar) / (pvi)	8/116	8/135	8/116	8/010	8/136	8/136	8/110	
Max air pressure (bar) / (psl)	8/116	8/116	8/116	8/116	8/116	8/116	8/116	
****Max suction lift dry (m) / (Fi)	1,675.25	24/7.87	4/13	3.5/11	4711	4/13:	5/10	
Max suction lift wet (m) / (F1)	87.26	8/26	9/ 29.5	9/29.5	9/29.5	9/29.5	9/19.5	
Max size of solids (a in mm) / (in)	2/0.08	370.12	4/0.18	6/0.24	10/0.39	15/039	15/0.59	
Max temp, pump in PE (°C) / (°F)	70 / 158	70/158	70 / 158	70 / 158	70 / 158	70 / 158	70 / 158	
Max temp, pump in PTFE (°C) / (°F)	100/212	100/212	100/212	100/212	1007212	100/212	-	
Weight								
Standard pump T in PE (kg) / IIII	0.75 / 1.63	1.6/3.53	43/9/48	10/22	25/5512	47/10162	147/342	
Standard pump T in PTFE (kg) / (Rs)	1.35 / 2.98	3.15/6.94	9/1984	17/38	47/103.62	87/191.80	-38	
Drum pump TD in PE (kg) / (lb)	- 2	24/539	4.7 / 10.36	10.5 / 23.15	-	-	-	
Drum pump TD in PTFE (kg) / (lh)		3.9 / 8.8	9.4 / 20.72	17.5 / 38.58		- 9		
Filter press pump TF in PE (kg) / Util	-	-	8717.64	21,6/47.62	30/6614	70 / 154.32	- 54	
Material of components								
Pump housing and all wetted thermoplastic details		PE, P	E conductive, F	TFE, PTFE condu	ective		PE conductiv	
Centre block (not wetted)			PP, PE	conductive, alu	minium			
Diaphragms:	PTFE, FKM		P	TFE, PTFE 17058	EPOM, NBR, FI	OM		
Valve balls	(4)		PTFE, EP	DM, NBR, AISI 31	6L***, PU. Cera	mic***, FKM		
Rod valves (TR9 and TR20)	PE,	PTFE	- 20		- 2		2.5	
Air valve				d.), stainless steel c:NBR (std.), EPDA				
O-rings (wetted)			PTFE	EPDM, FKM, FE	P/FKM			
Housing pin screws				Stainless steel				
Diaphragm shaft		Staink	ess steel AISI 31	6L (TR9, TR20, TR	800) / 304L (TSO	-T400)		
Drum handle (TD pumps)	-	Star	inless steel AISI	200000000000000000000000000000000000000	E		- 54	
Reinforcement plates (TF pumps)	140	-		Stainless st	eel AlSi 304		- 4	

^{* =} Recommended flow is half of the max flow, i.e. recommended flow for a T100 is 62 l/min (16.3 US gpm)

^{**** =} This is max value with stainless steel valve balls, other valve ball materials may reduce the suction. Please consult us



^{* =} Ask us for complete pump code with all available options and executions. Changes reserved without notice

^{** =} The value is based on pumps with PTFE diaphragms (other materials - please contact Tapflo). It should be remembered that the volume per stroke may vary depending on the pump's operating parameters.

^{*** =} Not available on T800

Metal series pumps

The compact, smooth and simple design is common for this series. Materials available are aluminium, cast iron, stainless steel and PTFE coated aluminium.



Aluminium and cast iron pumps

For transfer of pH-neutral fluids, both thin, thick, high solid content or abrasive. The aluminium and cast iron pumps are found in most fields; workshop and paint industries, purifying plants etc., to mention only a few.

AISI 316 stainless steel pumps

Made in lost wax cast method, ensuring great accuracy and finish. The stainless steel pumps combine great mechanical strength with good chemical features. AISI 316 is resistant to aggressive liquids like nitric acid and sodium hydroxide. The centre block, which is not in contact with liquid, is made from corrosive resistant polypropylene (PP) as standard (other materials upon request).











The metal pump range

- >> T25* 26 I/min, 1/2*
- >> T70 78 l/min, 3/4"
- >> T120 158 l/min, 1"
- > T220 330 I/min, 1 1/2"
- >> T420 570 I/min, 2"
- >> T820 820 I/min, 3"
 - " = aluminium and cast iron only



Typical applications

Industry	Example of applications
>> Workshop	Oils, fats, solvents, water, cooling fluids, lubricants
>> Print & paint	Glues, additives, varnishes, inks, paints, latex, acids, resins, pigments
>> Mining & construction	Adhesives, sumps, dewatering, coal sludges, pastes
>> Ceramic industry	Abrasives, glazes, water, enamels, clays
>> Chemistry	Acids, alkalis, alcohols, solvents, latex, emulsions

The ingenious Tapflo design

You will discover and appreciate simplicity when you maintain the pump.

We use approximately 70% fewer parts compared with other brands.



Optional Camlock connections

Metal series diaphragm pumps can be ordered with CAMLOCK connections. The coupling is connected by simply opening the coupler arms and inserting the adaptor into the coupler.

Durable valve seats

The valve seat is under constant stress from the movement of the valve ball. To obtain the best wear resistance, the integrated seat is made from AISI 316 stainless steel.



Flexible installations

The connections may be rotated 180°. Simply turn the connections to fit your piping system. Threaded BSP or NPT connections are standard. Twin connections are also available.

Low air consumption

The air distribution system is designed to ensure the shortest possible airflow path and eliminate dead volumes. This results in high efficiency and low air consumption.



Aluminium and cast iron - suitable for pH neutral liquids



Stainless steel - suitable for chemicals and food applications

Special versions



Drum pumps | TD series

Light and mobile solution for emptying drums and containers Tapflo TD pumps are irreplaceable in such applications.

The pumps are fitted with a drum tube in aluminium or stainless steel and a handle in AISI 316L stainless steel.

The Metal drum pumps range

- >> TXD25 26 l/min, 1/2" suction and discharge
- >> TXD70 78 I/min, %" suction and discharge
- TXD120 158 I/min, 1" suction and discharge

Features & Benefits

- Customizable tube length
 The drum tube is delivered in any length up to 2 m
- Highly mobile and versatile

 Pumps can be easy moved between different drums and containers
- Handy and convenient
 Compact pump equipped with comfortable handle



Pneumatic drainage

To ensure process automation Tapflo has developed a pneumatic drainage system. Thanks to this feature, the pump can be drained without detaching from the installation.

>> Available for sizes: T120 | T220 | T420

Ball lifters TL

This option is a great way to empty the pump of liquid if there is no possibility of pump disconnection from the installation.

With this easy solution you can simply raise the ball from the valve seat and allow the liquid to flow out of the pump.

Available for sizes: T70 | T120 | T220 | T420

Special versions





Tapfio TX ATEX dessification: £x81 2G Ex h NC T6..., T4 Gb £x8 2D £x h NC T60°C.... 1125°C D6

Tapflo TZ ATEX classification: Ex II 1G Ex h IIC T6.... T4 Ga



Pump with built-on dampener | TK series

The built-on dampener is an ideal solution to eliminate pressure variations on the pumps discharge where space in the installation is limited.


Available for sizes: TRK20, TXK25, TK50, TXK70, TK100, TXK120, TK200, TXK220, TXK420;

Twin pumps | TT series

Tapflo metal series pumps may be equipped with double in/ outlet to achieve "two pumps in one" for blending, mixing or circulation of liquids. The liquid in one pump chamber is separated from the other one.

Examples of applications

- Transfer of two different liquids, two pumps in one
- Mixing of two liquids with one pump (50/50 ratio)
- Transfer and return of printing ink from storage to ink tray
- Transfer and agitation of liquids with one pump (installation example)

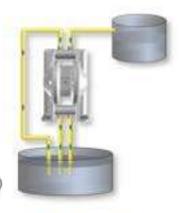

Explosion proof pumps | TX series

The ATEX directive 2014/34/EU (also known as ATEX 114) is applicable on products used in explosion hazardous zones. All aluminum and cast iron pumps are by standard ATEX approved and permitted to be used in Zone 1, having model names TX...

The standard stainless steel pumps are not allowed to operate in hazardous environments. Special conductive TX and TZ pumps are available for such applications. All plastic parts utilized in such pumps are made from conductive (carbon filled) materials thus made for use in explosion hazardous environments. What is more ATEX pump are equipped with a grounding connection.

The aluminium and cast iron pumps can be used in Ex-zone 1. Stainless steel pumps can be utilized in Ex-zone 1 and Ex-zone 0.


The conductive material ensures that no electrostatic loads will be accumulated in the pump.

Performance curves

The performance curves are based on water at 20°C. Other circumstances might change the performance. See below how the capacity will change at different viscosities and suction lifts. These curves are valid for all metal pumps.

Example see the red line ← - - - -

A flow of 10 litre/minute is desired. The discharge head is calculated to 20 mWC. We choose a T25. It requires an air pressure of 4 bar and will consume approximately 0.10 Nm³/min.

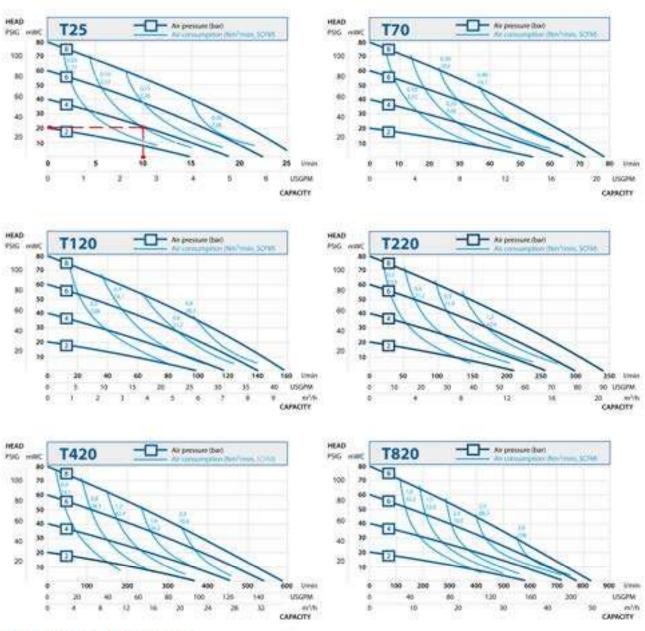


Capacity changes


Capacity changes at different suction lifts Capacity changes at different viscosities Viscosity (sPu) Vis

Dimensions


Aluminium and cast iron pumps T

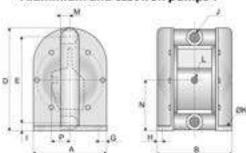


Stainless steel pumps T

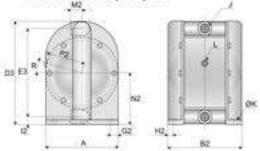


Drum pumps TD

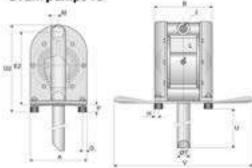

Twin pumps TT

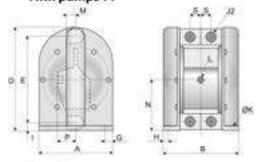

T820S

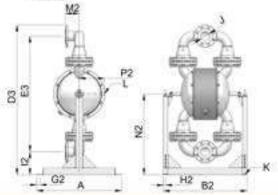

Dimensions for metal series

Dimensions in mm (where other is not indicated)

Dim				Pump si	200		
Dinin.	25	70	120	220	420	820A**	8205*
A	105	150	200	275	356	470	760
200	4.13	1.97	7.87	10.81	14,02	18.50	29.93
46.5	117	167	198	267	342	488	
В	4.61	6.57	7.80	10.51	13.46	1921	
4.07		157	200	282	347	488	750
82		6.18	7.87	11.10	13.00	10.21	29.5
	162	233	302	419	539	840	- 52
D	6.38	9.17	11.89	16.50	21.22	18.07	
	173	249	322	1000	-1	and the same of	
D2	6.81	9.80	12.68				
	. 0001		310	422	529	840	134
D3	-	229	1000000	1000000			
		9.62	12:20	16.61	50.83	13.07	52.8
E	132	190	252	346	448	688	
	5.20	7.48	9.50	13.63	17.64	27:09	-35
E2	147	216	279	-	-	-	1.6
100	5.79	8.50	10,98	250			100
E3	-	192	257	348	443		1035
-2		7.56	10.17	11.70	17.44		60.7
	13	20	20	4.7	14	- 1	
F	0.51	0.79	0.79			-	
	11	18	20	26	38	50	105
G	0.63	0.671	0.79	1.02	1.50	1.97	15
	.00.00	17	20	31	36		25
G2							
	-	0.67	0.79	1.22	1.42	***	0.98
H	32	19	20	29	30	53	- 7
77	0.47	0.75	0.79	1.14	1.18	2.09	26
H2	-	13.5	23.5	34	32	- 4	13
	- 35	41.53	0,93	1.34	1.26	8.7	0.51
1	16	22	27	34	47	82	- 4
4	0.63	0.87	1:06	1,34	1.85	3.23	
	+	19	27	38	44		206
12		0.75	1,06	1.50	1.73	74	4.17
	1/2"	3/4"	7***	11/2*	Z	DNE	10(37
J	1/2	3/4	- 1	1.1/2	3		(*(1)0)
	3/8"	1/2"	3/4"	1"	2"		1
12	3/8"	1/2"	3,641	1-	2"	-	
	6.5	10	10	10	10	12.5	25x1
ØK.	0.26	0.30	0.30	0.39	0.39	0.49	11/0
	1/8"	1/4"	1/4*	1/2"	1/27	3/4"	3/4
L					1000		
	1/8	1/4	1/4	1/2	1/2	374	3/4
M.	19	29	33	45	57	84.5	
	0.75	1.14	3.30	1.77	2.24	3.33	3
M2	100	40	52	70	90		126
	100	1.57	2,05	2.76	3,34	(8)	4.96
N.	82	117	153	207	274	356	-
196.0	3.23	4,65	6.92	8.35	18.79	14,02	- 1
100		115	155	212	266	-	724
NZ.	35.0	4.53	6.10	8.35	10.47		28.5
	30	47	39	59	59	72.5	
p	1.18	1.85	1.54	2.32	2.33	2.85	
		82	105	143	183	-	238
P2		3.23	4.13			-51-	9.37
	- V			5.63	7.20	12	
R	-	15*	15"	0"	0.	-	G,
		15	15"	er.	0		0.
5	12.5	21	26	35	420	3	0.5
514	0.49	0.83	1,02	1.38	1.57		-
ØT.	20	30	30	-	22	- 24	1.0
100	0.79	1.58	1.18		- 1.5		- (*
W	1170*	1170*	1170"	+	32	-	35
u	46.06	46.06*	46.06*	1.3	-		
	286	374					- 32
V	2,5353	37.4	400	-			

[&]quot; = Any length up to 2000 mm on request

^{* =} Any length up to 79° on request

** = Available in aluminium only


*** = Available in Stainless Steel only

Technical data

AND CO.	Pump size										
Data	25	70A	705	120A	1205	220A	2205	420A	4205	820 A	8205
General characteristics											
*Max capacity (l/min) / RtS (mm)	26/68	78	/20	158	(41)	330	17.87	570	V150.	820	£236
**Volume per stroke (ml) / (cu in)	45/28	105/04	101/62	272/106	3047185	884/533	962/367	2440/1459	2480 / 151.3	4897 / 25/18	3452/210
Max discharge pressure (bar) / (psi)						8	/116				
Max air pressure (bar) / (jini)						8	7.116				
*** Max suction lift dry (m) / (#1)	1.5/5	37	9.8	4/	13	4	13	4	/13	5/	16
Max suction lift wet (m) / (FI)	8/26	8./	76	8/	26	8.	1.26	8	/.26:	8	726
Max size of solids (a in mm) / (in)	3/011	4/	0.16	6/	0.24	107	0.39	15	10.59	13/	0.51
Max temp with EPDM/NBR (°C) / (°F)						80	2.176				
Max temp with P3FE (°C) / (∓)						11	0/230				
Weight											
Standard pump in alu (kg) / (lb)	2/44	5./	111	8.65	/193	18,1	/39.9	36.8	781.1	101.5	/2238
Standard pump cast iron (kg) / (fb)	4.1/9	9.97	21.8	17.6	/388	33,4	7.73.6	71.4	/197.A		The state of
Standard pump in AISI 316 (kg) / (lb)		6.8	/15	15.5	/342	35.9	/79.2	66.1	/145.2	137	£302
Drum pump TD in alu (kg) / (lb)	3/66	7/	115	10	122						1
Drum pump TD in AISI 316 (kg) / (lb)		7.5/	16.33	16/	35.27		-		2		
Material of components											
	aluminium										
Pump housing and all wetted	and cast	하는 아이들은 아이들은 아이들은 아이들은 아이들은 아이들은 아이들은 아이들은							or AISE 316L		
metal details	iron										
Centre block, alu and cast iron pumps					alur	minium (sta	indard) or i	cast iron			
Centre block, AISI 316L pumps	25				PP	(standard)	, conductiv	e PE or alum	inium		
Diaphragms					NBR, F	KM, PTFE.	PTFE 1705	B or EPDM			
Valve balls				NBR, PT	FE, AISI 31	6L, EPC	M, polyun	ethane or cer	amic****		
Air valve		B	rass / N	BR (standa	rd) or AlSt	316L / FKM	or PET / N	BR (standard	on TX820), P	ET/FKM	
Gaskets		Klinger	seal/NB	R (standar	f), Klinger	seal/EPDM,	Klingersei	L/FKM, FEP/F	KM (stainless	steel pumps	4
Housing screws			Ste	et on alum	inium and	cast iron p	sumps, A4-	80 on stainle	ss steel pum	ps	
Diaphragm shaft				Stain	less steel	AISI 316L (1	X25, T820	/ 304L (T70	-T420)		
Drum handle (TD pumps)		Stainle	ss steel	AISI 316					4.5		

^{* =} Recommended flow is half of the max flow, i.e. recommended flow for a T120 is 79 l/min (20.8 US gpm).

^{**** =} Not available on TX820.

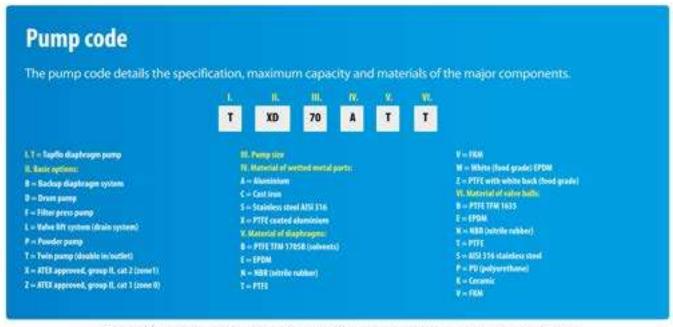

^{* =} Ask us for complete pump code with all available options and executions. Changes reserved without notice

^{** =} The value is based on pumps with PTFE diaphragms (other materials - please contact Tapflo). It should be remembered that the volume per stroke may vary depending on the pump's operating parameters.

^{*** =} This is max value with stainless steel valve balls, other valve ball materials may reduce the suction. Please consult us.

Sanitary series pumps

Hygienic design - made from electropolished stainless steel AISI 316L to meet the requirements in hygienic installations.



The Tapflo sanitary series is particularly designed to meet the requirements of the food, beverage, pharmaceutical and cosmetic industries.

Lubrication free air distribution system, maintenance free ball check valve system and total visual inspection of the wetted parts are some of the major features for this pump series.

The materials used on certain models comply with the FDA guidelines.

Models with extra fine internal surface finish Ra < 0.8 and Ra < 0.5 are available upon request.













The sanitary pump range >> T30 - 28 I/min, 1" >> T80 - 78 I/min, 1" >> T125 - 155 I/min, 1 1/2" >> T225 - 330 I/min, 2" >> T425 - 570 I/min, 2 1/2"

Typical applications

>> T825 - 820 I/min, 3"

Sec	tor	Example of applications
>>	Dairy products	Milk, cream, yogurt, cream cheese, melted cheese
>>	Grocery	Ketchup, mayonnaise, tomato products, mustard
>>	Beverages	Flavors, coloring, fruit juice
>>	Bakery	Dough, ingredients
>>	Brewery	Beer, flavors, coloring, wort
>>	Hygiene	Soap, shampoo
>>	Cosmetics	Cream, alcohols, perfume

The sanitary design

Made to be clean

Quick dismantling


The clamp system ensures quick and easy dismantling without any tools

Variety of connection types

The pump is supplied as standard with SMS3017/ISO2037 clamp connections. However, the pump may be equipped with almost any type of connection used in the hygienic field – DIN 11851 thread, SMS 1145 thread, DIN 11864 aseptic connections to mention a few.

Pollution free air valve

The sealing system is lubrication free, always keeping your product and environment free from oil contamination.

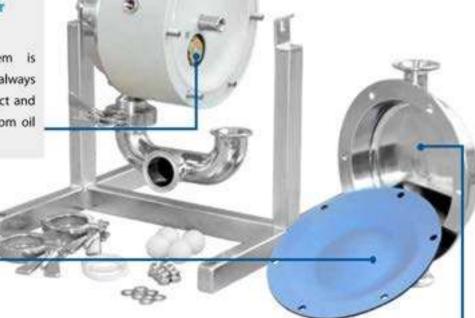

Plain surface

The sandwich diaphragm has a completely plain surface, which eliminates bacteria growth problems. The diaphragm is available in food grade materials -PTFE, white EPDM or NBR FDA.

Superior finish

Both liquid side and outside is electropolished, to obtain superior finish and hygiene. Special surface finish may be done according to your requirements.

Easy draining

Drain the pump by turning the pump in its support (780-7825)

Our design allows for total visual inspection of the wetted parts. There are no hidden areas where bacteria can grow. The manifold clamps and the housing screws are simply removed for complete disassembly and cleaning. The pump is also designed for cleaning and sterilization in place — C.E.P. and S.I.P. After such operations, the pump is easily turned in its support for drainage.



Special versions









Heating jacket

The heating jacket is used when the pumped product has to maintain a specific temperature, high or low, throughout the process. A heating or cooling medium is continuously circulated in the heating jacket. The jacket is covering all the wetted parts of the pump.

Available for sizes: T80, T125, T225, T425

Flap valves for big solids

Flap valves are available for the sanitary pumps, ideal in applications with bigger size and delicate solids.

The gentle pumping principle will maintain solids without any destruction.

Models available with flap valves:

- >> T80 (max 17 mm solids)
- > T125 (max 18 mm solids)
- >> T225 (max 42 mm solids)
- > T425 (max 44 mm solids)
- > T825 (max 95 mm solids)

Magnetic ball lifters

> Available for sizes: T125, T225, T880

Magnetic ball lifters are implemented in Sanitary
AODD pumps, to enable pump emptying without
removing it from the installation when no other
draining option is available. Rotating the pump is no
longer needed.

Counter-connections

In order to ease the pump connection with installation Tapflo has added a full range of counter-connections to sanitary pumps. They fit pumps with standard tri-clamp connection as well as optional DIN11851 and SMS 1145 connections.


Performance curves

The performance curves are based on water at 20°C. Other circumstances might change the performance. See below how the capacity will change at different viscosities and suction lifts. These curves are valid for all sanitary pumps.

Example see the red line - - - -


A flow of 25 litre/minute is desired.

The discharge head is calculated to 25 mWC. We choose a T80. It requires an air pressure of 4 bar and will consume approximately 0.20 Nm³/minute.

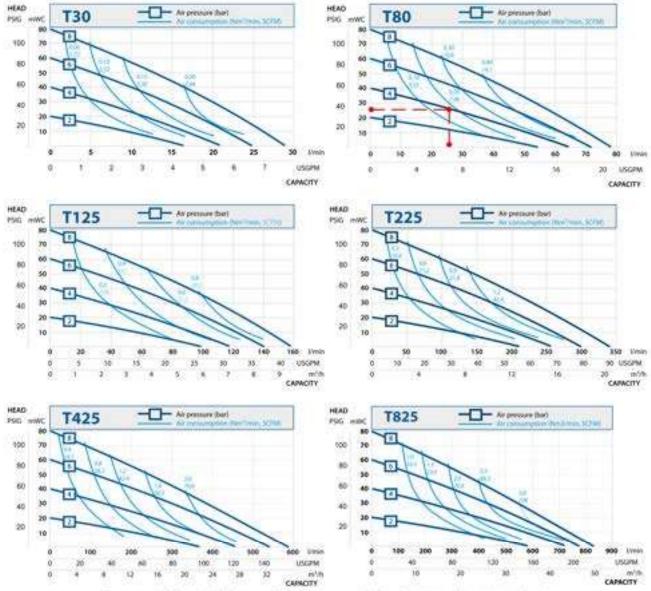

Recommended flow is half of the max flow, i.e. recommended flow for a T80 is 40 l/min (10.6 US gpm).


Capacity changes

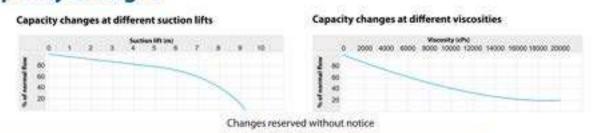

Dimensions

Dimensions for sanitary series

Dimensions in mm (where other is not indicated): Dimensions in inch (where other is not indicated)

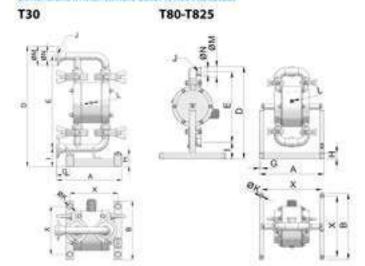

- * = Dimensions for standard clamp connections only
- 1 = Clamp connections/pipes according to SMS3017/ ISO2037 (T425, T825)
- 2 = Threaded connections according to DIN 11851
- 3 Threaded connections according to SMS 1145

200				Pump si	të:		
Dim	1	30	80	125	225	425	825
-	A:	169	295	320	404	468	750
	A.	6.7	13,6	12.6	15.9	18.4	29.5
	В	153	303	328	412	476	760
	В	16.07	11.9	12.9	16.2	18.7	29.0
		313	393	458	647	808	1288
	D	12.3	13,5	18.0	25.5	31,6	50.7
	**	240	294	350	528	664	10343
	E	9.4	11.6	13.8	20.8	26.7	40.7
	1000	34	10	10	10	10	20
	G	1.3	0.4	0.4	0.4	0.4	0.8
	40	30	30	30	30	30	60
	н	1.2	7.2	1.2	7.2	1.2	2.4
	60	48	74.5	82.5	86.5	98.5	206.5
	200	1.9	2.9	3.2	3.4	3.9	2.1
	TC	DN25	DN25	DN38	DN51	DN70	DN76.1
	DIN!	DN20	DN25	DN40	DN50	DN65	DN80
20	SMS1	25	25	38	51	63.5	76.1
	RJT	3/4"	1"	1.1/2"	2"	3"	31/2"
	2004	9	9	9	9	9	25×13
	ØK.	0.4	0.4	0.4	0.4	0.4	1x0.5
	L	1/8"	1/4"	1/4"	1/2"	1/2"	1/2*
		50.5	50.5	50.5	64	91	98
- 1	QM*	2.0	2.0	2.0	2.5	310	3.9
	ONE	22.6	22.6	35.6	48.6	66.8	72.9
	ØN*	0.9	0.9	1.4	1.9	26	2.9
	×	125	275	300	384	448	710
	Α.	4.92	16.83	11.81	15.12	17:64	27.95

General dimensions only, ask us for detailed drawings. Flap valve pumps are not shown here, ask us for drawings.

Technical data

Technical data	Pump size									
Hermital data	30	80	125	225	425	825				
Max capacity (I/min) / (U5 gpm)	28/7,4	78/ 20.n	155 / 40.0	330/87.3	570/150.6	820/2166				
"Volume per stroke (ml) / (cu in)	40 / 2.4	135/8.1	314/192	1000 / 61	2300 / 140.3	3281 / 3003				
Max discharge pressure (bar) / (ps/l	8/116	8/116	8/116	8/136	8/116	8/116				
Max air pressure (bar) / (p)-i)	8/116	8/110	8/116	8/116	8/116	8/116				
**Max suction lift dry (m) / (Fo	2/6,6	379.0	4713	5/10	5/16	4/13				
Max suction lift wet (m) / (Ft)	8/26	8/26	9/29.5	9/295	9/295	9/293				
Max size of solids (e in mm) / (in)	370.12	4/0.76	6/024	10/1139	15/0.59	20/059				
max size or solids (a in mm) / (in)	370.12	17/0//	37 / 9:67***	42/1.65***	42/165***	95/3.74***				
Max temperature (°C) / (°F)	110/230	110 / 239	110/230	110/230	110/230	110/230				
Weight (kg) / (flii)	47.0	8/38	117.24	21 / 45	35/77	133 / 293				

Wetted metal details	Stainless steel AlSI 316L electro polished	
Centre block (not wetted)	PP, PE conductive	222
Diaphragms	PTFE, PTFE with white back, EPDM, white EPDM, white NBR	PTFE
	그 그 사이에 하고 가게 하고 있는데 하는데 하는데 하는데 하는데 나를 하는데 되었다.	EPOW
Valve balls	PTFE, AISI 316, PU, Ceramic, PE1000	
Air valve	Brass (std.), stainless steel AISI 316L or PET with NBR (std.), EPDM or FKM	O-rings
Gaskets	PTFE or EPDM	
Housing pin screws	Stainless steel	
Diaphragm shaft	Stainless steel AJSI 316L (T30, T825) / 304L (T80 -T425)	

- * = The value is based on pumps with PTFE diaphragms (other materials please contact Tapflo). It should be remembered that the volume per stroke may vary depending on the pump's operating parameters.
- ** = This is max value with stainless steel valve balls, other valve ball materials may reduce the suction. Please consult us,
- *** = Flap valve version. Theoretical max solid size, the actual size may vary depending on the shape. For more information contact us.

Pump code The pump code details the specification, maximum capacity and materials of the major components. LT - Tapffe disphrages pemp W = NER (mitrile rabber) V. Material of diophragme B = PTFE (7058 (selvents) fi Basic options: 8 - Backup diaphragm system E - EPOM 5 = A19 31 ju W - White (see grade EPSM P = PU (polyurethase) I = Pump with heating jacket E o Ceranic X = ATEX approved, group II, cat 2 (zone 1) H = MRE (nitrile nubber) M - PTFE TEM 1635 Z = ATEX approved, group II; cat 1 (zone fil 7. - PTFE with white back (food grade) blank - flap valve version W. Material of welfed metal parts VI. Material of valve both: 5 - stainless steel AISI 336L E-EPOM

Aseptic series pumps

Keeping your process clean



Tapflo Aseptic series pumps are designed for service in pharmaceutic-, biotech- and food industries where a clean process is the key.

Tapflo Aseptic series is EHEDG certified, has FDA and USP VI approved materials and conform to the ATEX directive 2014/34/EU.

Typical applications

Industry Example of applications >> Food & dairy Soup, cream, syrup, dairy products, flavoring, alcohol, chocolate, paste Pharmaceutics & cosmetics Cream, paste, alcohol and filtration gel

















Features & Benefits





Gentle pumping no damage of sensitive products

Wide range of connection types TriClamp, sanitary threads (DIN, SMS) etc.

Hygienic surfaces housings made from electro polished stainless steel AISI 316L, Ra < 0.8 (standard) or Ra < 0.5 (on request)

No leakage no rotating shaft seals

Flexible installation self-priming

Reliable in service can run dry and against closed valve without damage

Environmental friendly lube free air valve

Hygienic diaphragms designed without any nuts or plates on the pumped side

The EHEDG certificate




The EHEDG (European Hygienic Engineering & Design Group) certificate is your guarantee that the design is according to the hygienic guidelines. Furthermore the pump is cleanability tested, which means bacteria does not grow in the pump after cleaning and draining procedure.





Keeping your process clean


Smooth surfaces and cleanability are important keys for the EHEDG certification

Performance curves

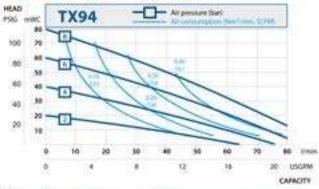

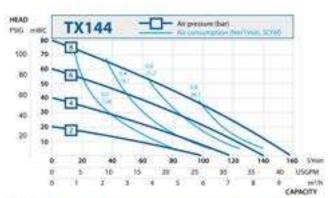

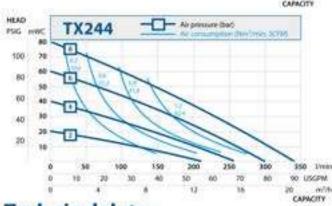

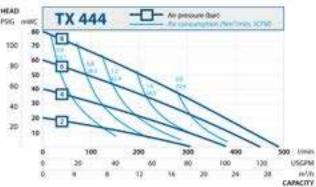

Technical

O-rings

PAGE 1		Pun	np size		
Data	TX94	TX144	TX244	TX444	
General characteristics					
Max flow (l/min) / IUS gpmi	94725	144/58	270 / 71	360 / 95	
*Volume per stroke (ml) / (ru in)	95 / 5.80	256 / 15.62	796 / 48.57	1922/117.2	
Max discharge pressure (bar) / (psi)	8/16	8/16	8/16	8/16	
Max air pressure (bar) / (psil)	8/16	8/16	8/16	8/10	
""Max suction lift dry (m) / [[1]	2/66	3/98	4.4714.0	5/16	
Max size of solids (ø in mm) / (in)	6/0.74	6/024	10 / 0.39	15 / 0.6	
Max temperature (°C) / (°F)		-20"+110"C (temporarily higher)		
Weight (kg) / (lh)	15/33	22/485	50/110	107 / 236	
Connections	DIN 32676 (standa	ard), DIN 11864, DI	N 11851		
ATEX details	TX pumps: Ex II 2G Ex h IIC T6 Ex II 2D Ex h IIIC T6		TZ pumps: Ex II 1G Ex h 8C T6	T4 Ga	
Material of components					
Housing, manifolds	AISI 316L, Ra < 0.8	k, Ra < 0.5 on requ	est		
Diaphragms	PTFE (FDA & USP)	VI)_PTFE 1705B (so	livents, FDA & USP VI)		
Valves (ball type)	PTFE (FDA), PTFE	USP VI & FDAI, AIS	1316L		

	1			
	(
		0		
				1
_			٨	-

400	reamp said										
Dim	TX94	TX144	TX244	TX444							
Α	278	278	360	433							
В	278	278	360	433							
E	457	488	700	885							
H	188	168	270	331							
1	DN 40	DN 50	DN 65	DN80							

^{*=} The value is based on pumps with PTFE diaphragms (other materials - please contact Tapflo). It should be remembered that the volume per stroke may vary depending on the pump's operating parameters.

EPDM (FDAL EPDM (USP VI & FDA), FEP/FKM (FDA), FKM Backup diaphragm system. Magnetic ball lifters

^{**} This is may value with stainless steel valve balls, other valve ball materials may reduce the suction. Please consult us. Dimensions in mm (where other is not indicated)

Intelligent pumps - TC series (E/N?)





TC Intelligent pumps are fitted with ingenious LEAP* technology developed by Tapflo.

LEAP® or 'Low Energy Air Pump' is a patented technology used in AODD pumps to reduce the minimum operating air pressure by reducing internal losses and friction found in conventional AODD pumps.


LEAP uses a unique indirect system to detect the position of the diaphragm shaft controlling the diaphragm movement automatically.

Features & Benefits

- Available in Plastic, Metal and Sanitary series AODD pumps TC50 - TC425 (T50 - T425 equivalent)
- Retrofit Leap can be fitted to any existing Tapflo Air Operated Diaphragm Pumps
- **Batch Dispensing** allowing the pump to automatically stop after the required volume has been dispensed.
- Improved Lifespan the TC series uses an air valve that has a significantly longer life expectancy over rubber seal technology.
- Dry Running by analysing the frequency of pulses, the pump can analyse when it is running dry.

- Noise Reduction ability to utilise lower air pressure reduces the noise of the pump
- Electrical feedback signal allows for external monitoring of the pump process.
- Improved Maintenance main air valve can be changed in under two minutes without the removal of the pump from the process line.
- Control Simplification no need for an external pneumatic solenoid valve, reducing costs and simplifying control.
- Dead Heading as with dry running, the frequency of pulses can be monitored, alerting if the pump has a blockage.

Graph showing fluid flow against air pressure required

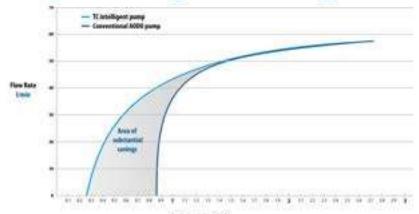

The pump fitted with LEAP® Technology is able to start pumping at 0.3 bar without stalling, in test the pump was already achieving flow rates of 70% of its maximum open end flow before other pumps had even started.

Filter press pumps - TF series

The Tapflo pump station for filter press feeding is a very compact unit that can be mounted directly



TF series

The design and function allows the user a straightforward pressing of slurries. Pressure regulator is already mounted to the unit.

An external pressure booster doubles the delivery pressure. For example, with available air pressure of 7 bar, the delivery pressure will be maximum 14 bar.

TF pumps are based on standard Tapflo AODD pump design

PE & FTFE: TF 50 | TF 100 | TF 200 | TF 400 Metal pumps: TF 70 | TF 120 | TF 220 | TF 420

Features & Benefits



Can run dry



Self priming



High pressure transmission up to 1:2



Few parts - easy to maintain



Long service life



Reliable and compact

The Installation

Adding a pump to an existing filter press was never such easy. The pump is already equipped with a pressure booster, manometers, regulation knob and all essential hoses and fittings.



Technical data

Pump size	Connection size ("BSP or NPT)	"Max capacity (l/min) / (US GPM)	Max pump pressure (bar) / (PSI)			
TF 50 TF 70	1/2" 3/4"	*60/158 78/20	16/ 232			
TF 100 TF 120	12	*125/33 158/41	16 / 232			
TF 220 TF 420	1 1/2" 2"	*330 / 87 570 / 150	14/203			
TF 200 TF 400	1 1/2" 2"	*330 / 87 570 / 150	12/174			

^{* =} This max flow is obtained when using a bypass round the pressure booster at low pressure

Powder pumps - TP series



Reduced contamination

The powder is transferred in a hermetic system from the powder container to your process.

Economical and compact solution

The Tapflo powder transfer pump can do the same job as many complex and large powder systems. The compact design also makes the unit portable.

What kind of powders?

The powder transfer pump will handle different types of process powders, with specific weight from 80 up to 720 kg/m³ dry weight. Generally, if the powder does not clump together when squeezed in hand, the Tapflo powder transfer pump can be used successfully. A few examples of common powders are sintering powder, carbon black, resins and silicones.

Capacity

The capacity of the powder transfer is extremely different from one powder to another, depending on the consistency and weight etc.




EN 10204







Working principle

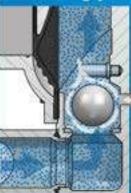

No start up problems

The air induction system eliminates powder pack up problems when starting the pump.



Air is induced to the powder side of the pump for diffusion of the powder. The induction flow can manually be adjusted by means of a needle valve to obtain a optimum performance.

Features & Benefits



Economical

compared with other complex powder systems



Convenient

and safer than manual powder handling

Technical data

Model	TXP70	TXP120	TXP220	TXP420	TXP820				
In/outlet connections	3/4" BSP thread (NPT on request)	1°BSP threads (NPT upon request)	1 1/2"BSP threads (NPT upon request)	2"BSP threads (NPT upon request)	3"BSP threads (NPT on request)				
Features		Comple	te air induction system i	ncluded					
Explosion protection		ATEX marked accom	ding to group HG (gas) / I	ID (dust), category 2					
Housing material		PTFE coated aluminium							
Diaphragm material			EPDM, NBR, PTFE						
Valve ball		EPDM, NBR, AISI 316L, PU							
In/outlet material		Stainless stee	el AISI 316L or PTFE coate	ed aluminium					

Pharmaceutical pumps - 5UVI series

USP VI approved pharmaceutical series air driven pump for pharmaceutical and biotech industries



This pump series was developed in co-operation with one of the world leading supplier to the biotech market. It serves the biotech- and pharmaceutical industries in numerous applications.

Our unique USP approved (United States Pharmacopoeia) hygienic PTFE or PP pump, features all wetted parts in USP class VI certified materials.

Simplicity

Pump housing with only three parts makes it extremely easy to maintain.

Superior finish

High finish and hygienic approved materials.













The Pharmaceutical series pumps

T53

T103

T203

T403

60 l/min; 34"

125 l/min; 1"

330 l/min; 1 1/2"

570 l/min; 2"

Features & Benefits



Sanitary design smooth internal surfaces



Inert materials

no contamination of the pumped product



USP class VI approved materials



Extremely easy to maintain pump housing with very few components

Active pulsation dampeners

The Tapflo pulsation dampener works actively with compressed air and a diaphragm, automatically setting the correct pressure to minimise the pulsations.



The active pulsation dampener is the most efficient way to remove pressure variations on the discharge of the pump.

The Tapflo pulsation dampener works actively with compressed air and a diaphragm, automatically setting the correct pressure to minimise the pulsations.

Explosion proof models are available

Certified according to directive 2014/34/EU (ATEX), group II, cat 2, for use in EX-zone 1. Contact us for information.



EN 10204









Working principle


air refease position



filling position

When the pressure in the piping system decreases, due to the pulsating nature of the pump operation, the pulsation dampener eliminates pressure peak to the discharge between the pump strokes, therefore supplying a steady flow of pumped medium. This pumping action created by the dampener, decreases the pressure variations and pulsations.

Features

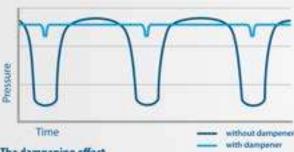

The dampening effect

The pressure variation in a discharge line with and without a pulsation dampener.



Minimized vibrations and water hammer effects



Protection of all kinds of instruments in your pipe system



Optimized pump performance and reduced maintenance costs



Minimum air consumption



Reduced pressure peaks

Options & accessories



Pulsation dampener with stand



Pulsation dampeter with pump




Pulsation dampener with quardian



DTK - dampener designed to be built on pump

Dimensions

PE, PTFE & aluminium dampeners

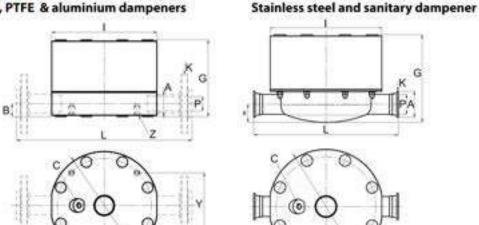

Dimensions in mm (where other is not indicated) | Dimensions in inch (where other is not indicated)

	Dimension										empener si									
Į,		9/20	25	30	50	.76	80	105	120	125	200	220	225	400	420	425	800		820 5	825
	85P	63/8"	61/2	63/8	67/5	6	3/4"		61			61172			62'		min.	63	1	
A	DIN Flange ANSI Hange	95		95	95	105	7.	115	115	- 7	150	150	7/	165	165	- 5	202		202	7.
3	W63017/502037	82		50.5	1.9	-4	50.5			50.5		1.0	64.			91			1.5	
	DIN 118313	- 1		Rd-44x1/6			Rd 52 x 1/6		-	Rd 65 x 1/6			Rd 78 x 1/67			Rd 95 x 1/6		1.5	100	Rd 110 x 1
		15/33	0.59	0.63	17/32,41	16,5	165	25,5/45	0.56	16.5	33/50'	100	101	45/61 141/2.40	5.61	46	92	162	670	0.75
	c	54000ml	61/4		dillingto.	\$1.14			G 1/4°	11/1/2	1 225/2563/10	G 1/4"		Harry Georgia	0.144		use		61/4	- dela
			110			158			208			277			360				470	
	0		4.13			6.22			8,19			10,91			14,17				18,50	
	6	85 / 103	85	79	109/1321	117/109	1165	148/161.5	135/1443	235	200/217,5	213/200.9	209	244/251	256/243,5	255	394	392	330	330
	.0	1257106	3,15	371	429/520	4,6134,19	4,99	ESDEM!	5,3105,64	5.70	7,87 (8.56)	8.39(7.89)	8.23	9,61(10,28)	10,08/9.59	70,04	15,31	15/43	12,99	12,99
			107			155			203			270			352		470	450		470
	0		4.21		A THEORY	6,10.			2,9%			15003			13.86		7830	10.00		18.50
	85F	638	61/2	1100000	61/2"	63/4"		61	6.35	- 6	611/2"	611/2"	- 8	6.2"	6.2"		1000	63	1.30	
	DIN Flange*	DNIS	. v.	DN 15	DNIS	DM:50	-	DN25	DN 25	141	DN40	DN 40		ON50	ON 50	-	DN90	-	DNBO	-
K.	ANSI Flange*	1/2"		1/2"	1/2"	1/2"	200	r	As.	externo	8.1/2"	1.572"		2"	2"	and a	3"	1.0	3.	
5	MS3017/802037	192		DN-25	OF.	100	ON 25		. +	DN 38	- W.V	12500	DN 50	176	74	DN 70				
	DIN 118513"	* 100	-	DN25	10	4	DN 25	100		DN 40	- 44		ON 50		001	DN 65	100	-	30	DW 80
	DIN & ANSI	235				85		37		-		10.	100		50	100	700	- 4-	100	
	Flange	1.2		- 5		22	-	10				20.			,66		27,56		27,56	
£.	85P	100				55	-	20				10			52	-		450	1.5	
		4,2	1	100	- 06	10	Charles.	7,5	77	20.0		63	7.000	13	1,86	100		17,72	0.0	1000
	Other			180			256			300			350		-	450	-	- 7	- 3-	600
	Connections'	660		7,676	199	46.6	8,27	100	26.5	11,81	1200		13.79		10.47	17,72	-		200	11382
	DRI Flanger	14		923	0.01	22,9	-	110	29.7		120	1,78	-	2.02	36,3	-	80		80 1.11	-
		14	13	17.3	14	22,7	- 20	26	30.7		45.4	42.8		53.4	54.0	- 2	80		80	
	ANSI Flange*	0.55		0.68	0.55	11.00		150	1.10	- 1	1.50	1,00		2.00	0.10		1.15	-74	1.15	
p	SM53017/	400	15	22,6	3950	1097	22,6	100	717	15.6	100	197	49		900	66.8	995		410	
	1502037	-3	100	0.89			9,89			1.40	1		1,93	100		3.03			13	
		-		20	15.5		26	1	4.7	38		100	50	10.0	-	66	20	-	150	81:
	DBN 118513*			4.70	1		1.02		-	1,90	0.00		1,97	500	1-7-6	2.00		-		3,13
	102	36		100	90	2.8	101	311	LE	7	56	2.6	1100	22	M.3	100		297		
	×	1.4,6				56		43		V		50.			81	- 1		10.60		-
	760	863		100	10	0.1		133	0.6	-	36	7.6	+1		6.3	-		297		*
	*	14		-		66	4	53	18		6	50	4		91	4		11.60		
	2	Mai	20	-	Mi	x20	-	M8x22 M8x30 PE	M8x25		M8x22 PTFI M8x22 PE	M8x25	*1	M8x30-PE	M8x25	-	M8x22	M	625	- 5

1 UPE / PTRE 2 = 35 / AUG

3 - SMS3017/ISQ3007, DW 11857, SMS1145, 85 eluly (RJT) 4 × Only places and metal pumps

Dampener code P DT 50 IV. Material of wetted dampener housing: I. 01 - Tapfio active pulantion dampener V. Material of diaphragm: A = aluminium
P = polyethylene
S = stainless steel ASS 316L
T = PTFE
X = PTFE/alu DTK - dampener designed to be built on pump E = EPOM B = PTFE 17058 (solvents) II. Busic options: W = White (food grade) EPDM N = NB2 (nitrile rubber) X = ATEX approved, group II, cat 2 III. For Tagflo pump size (I/min)

I = PTFE with white back

Systems & accessories

Guardian systems



The Guardian is an energy conservation device designed to protect an air operated double diaphragm (AODD) pump from operating in an inefficient manner that uses unnecessary energy and reduces the life of its parts. It also offers the added benefit of providing greater safety to applications of high risk.

The Guardian directly monitors the discharge fluid pressure against its set point stopping the pump if the media pressure increases above the set point (closed valve) or falls below the set point (dry-run) dependant on configuration.





Barrier pumps (TB) have an additional set of diaphragms used to back-up the primary diaphragms. In case of a breach the liquid remains inside the pump, instead of leaking out through the air exhaust. The Guardian monitors the pressure between the primary and secondary diaphragms, stopping the pump if the pressure increases above the set point.



The Guardian monitors the fluid discharge pressure of the pump, stopping it if the pressure falls below the set point, caused by a lack of media on the suction causing air to be ingested into the pump.

Dead head & stop

The Guardian monitors the fluid discharge pressure of the pump, stopping it if the pressure rises to the set point, caused by a closed valve or over pressure in the discharge line.

Dead head & restart

The Guardian monitors the fluid discharge pressure of the pump, stopping it if the pressure rises to the set point, caused by a closed valve or over pressure in the discharge line. When the pressure falls below the set pressure, the pump automatically restarts.





Control systems



Pneumatic batch control

Pneumatic batcher can control any Tapflo AODD pump to deliver accurate and repeatable volumes. Fully programmable allowing you to set the batch amount (TPUK-BP) or batching time (TPUK-BT).

Pneumatic level control

A fully pneumatic automatic level system used to maintain set liquid levels within a sump or thank,

Stroke counter / low pressure VFC

A stroke to volt free contact (VFC) is available for integration with PLC systems. Simply connect to any AODD pump via the air exhaust muffler to monitor the pump strokes.

Life counter

Tapflo's life counter simply connects to the AODD pump air exhaust, representing the strokes on the LCD display. Compact, easy to use and cost effective this simple system will allow you to control servicing and implement a preventative maintenance routine.

Mobile solutions for pump units and systems

Mobile pump units are found as the best solution for the users of spread technological processes. The portability of the Units allows easy movement to various locations. This means almost limitless application.



Trolley 5 2-wheel

Tapflo standard AODD pumps with capacity up to 125 l/min (pump sizes: up to 100/120, except T80),



Trolley M | 4-wheel

Tapflo standard AODD pumps with capacity up to 570 l/min (pump sizes: up to 400/420, except T425),



Hygienic trolley

Hygienic trolleys offered by Tapflo are available in two sizes. M Trolleys are used for standard pumps up to T425. L Trolleys are used for pump dampener assemblies.

Filter regulator & needle valve kit



There are many benefits of using an individual filter regulator and needle valve for your AODD pump. You will always be able to run the pump with right air quality and optimum pressure and speed to save energy. Furthermore the lifetime of pump components will increase. The kit includes a filter regulator, gauge, wall bracket, needle valve, and/ or water separator. The filter is 5 micron and regulator is 0-12 bar, available in sizes 1/8" up to 3/4".

Pneumixer



The Pneumixer was initially developed for the paint and ink industry where most raw materials in drums or containers settle out over time and need to be mixed or blended prior to use. This usually means rolling, shaking or pumping to a mixing vessel; that adds time, waste, mess and expense.


Features & Benefits

- No paddles
- No rotating blades
- Variable agitation
- Suits all containers up to 1000 litre IBC
- No moving parts utilises pump power to mix & dispense
- Eliminates problems with conventional mixing

- No air entrainment
- No shear
- Closed vessel mixing system
- Fully controllable pneumatic operation and control
- Reduced environmental exposure
- No need for pumping to mixing vessel

Transfer mode

The discharge valve is open and the recirculation valve is partially open, to both mix and to transfer the product out of the Pneumix

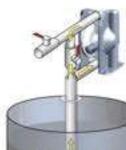

Mixing mode

The discharge valve is closed and the recirculation valve is open, to allow the product to circulate in the container.

TAPFLO AB











Sweden

Filaregatan 4 | S-442 34 Kungälv

Tel: +46 303 63390 Fax: +46 303 19916

E-mail addresses:

Commercial questions: sales@tapflo.com

Orders: order@tapflo.com

Tech support: support@tapflo.com

Tapflo products and services are available in 75 countries on 6 continents.

Tapflo is represented worldwide by own Tapflo Group Companies and carefully selected distributors assuring highest Tapflo service quality for our customers' convenience.

AUSTRALIA | AUSTRIA | AZERBAIJAN | BAHRAIN | BELARUS | BELGIUM | BOSNIA | BRAZIL | BULGARIA | CANADA | CHILE | CHINA | COLOMBIA | CROATIA |
CZECH REPUBLIC | DENMARK | ECUADOR | EGYPT | ESTONIA | FINLAND | FRANCE | GREECE | GEORGIA | GERMANY | HONG-KONG | HUNGARY |
ICELAND | INDIA | INDONESIA | IRAN | IRELAND | ISRAEL | ITALY | JAPAN | JORDAN | KAZAKHSTAN | KUWAIT | LATVIA | LIBYA | LITHUANIA | MACEDONIA |
MALAYSIA | MEXICO | MONTENEGRO | MOROCCO | NETHERLANDS | NEW ZEALAND | NORWAY | POLAND | PORTUGAL | PHILIPPINES | QATAR |
ROMANIA | RUSSIA | SAUDI ARABIA | SERBIA | SINGAPORE | SLOVAKIA | SLOVENIA | SOUTH AFRICA | SOUTH KOREA | SPAIN | SUDAN | SWEDEN |
SWITZERLAND | SYRIA | TAIWAN | THAILAND | TURKEY | UKRAINE | UNITED ARAB EMIRATES | UNITED KINGDOM | USA | UZBEKISTAN | VIETNAM

Tapflo Group Companies

Australia

Tapflo Oceania (Pty) Ltd Tel: +61 1800 303 633 sales@tapflo.com.au

Austria

Tapflo Austria
Tel: +43 732 27292910
sales@tapflo.at

Baltic States

Tapflo Latvia
Tel: +371 67472205
sales@tapflo.lv

Belarus

Tapflo Belarus Tel: +375 17 3934609 sales@tapflo.by

Belgium

Tapflo Benelux B.V. Tel: +31 (0)85 00 743 00 info@tapflo.nl

Bulgaria

Tapflo EOOD
Tel: +359 (0)2 974 18 54
office@tapflo.bg

Canada

Tapflo Canada Tel: +1 514 813 5754 canada@tapflo.com

Croatia

Tapflo d.o.o.
Tel: +385 91 4884 666
sales@tapflo.hr

Czech Republic

Tapflo s.r.o. Tel: +420 513 033 924 tapflo@tapflo.cz

China

Tapflo (Wuxi)
Tel: +86 510 8241 7072
sales@tapflo.cn

Denmark

Tapflo Danmark Tel: +45 36 454600 info@tapflo.dk

France

Tapflo France Tel: +33 1 34 78 82 40 info@tapflo.fr

Hungary

Tapflo kft.
Tel: +36 30 148 8551
office@tapflo.hu

India

Tapflo Fluid Handling India Pvt Ltd Tel: +91 20 65000215 ac@tapflo.in

Ireland

Tapflo Ireland Ltd Tel: +353 1 2011911 info@tapflo.ie

Italy

Tapflo Italia
Tel: +39 0362 306528
info@tapfloitalia.com

Japan

Tapflo Japan K.K.
Tel: +81-3-6240-3510
tapflojp@tapflo.co.jp

Kazakhstan

Tapflo Kazakstan Tel: +7 727 3278347 sales@tapflo.kz

Netherlands

Tapflo Benelux B.V. Tel: +31 (0)85 00 743 00 info@tapflo.nl

Poland

Tapflo Sp. z o.o.
Tel: +48 58 530 42 12
info@tapflo.pl

Romania

S.C. Tapflo Rom. S.r.l. Tel: +40 21 3451255 sales@tapflo.ro

Russia

Tapflo Company
Tel: +7 495 232 18 28
sales@tapflo.com.ru

Serbia

Tapflo d.o.o.
Tel: +381 21 44 58 08
sales@tapflo.rs

Slovakia

Tapflo s.r.o.
Tel: +421 911 137 883
tapflo@tapflo.sk

Slovenia

Tapflo GmbH Tel: +386 68 613 474 sales@tapflo.hr

Spain

Tapflo Iberica
Tel: +34 91 8093182
avives@tapfloiberica.es

South Africa

Tapflo (Pty) Ltd
Tel: +27 31 701 5255
sales@tapflo.co.za

Turkey

Tapflo Makina Ltd Tel: +90 216 467 33 11 sales@tapflo.com.tr

Ukraine

TOB Tapflo
Tel: +380 44 222 68 44
sales@tapflo.ua

Uzbekistan

Tapflo Uzbekistan Tel: +998 712370940 sales@tapflo.uz

United Kingdom

Tapflo (UK) Ltd
Tel: +44 2380 252325
sales@tapflopumps.co.uk





If your country is not listed please visit www.tapflo.com/en/contact